


Where there is no tag, the difference between Modul and A400 can be determined by the input flange



A400





ModulB

MODUL B SERIES

CHECK TAG

Example: B0201 is the travel

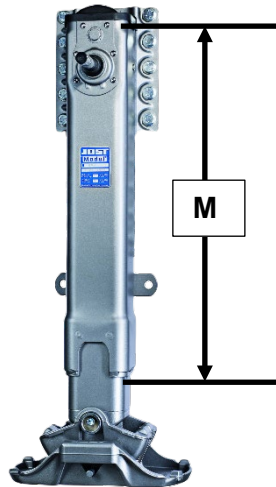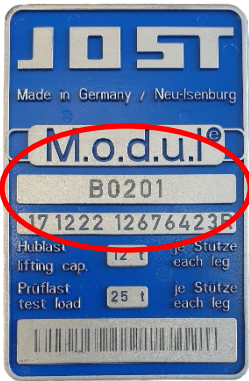

NO TAG – Measure the outer casing as below

M = length of outer housing (**under cap**)

Model	Geared Leg	Ungearred Leg	Travel
B0201	815mm	815mm	580mm
B0301	765mm	765mm	530mm
B0401	710mm	710mm	480mm
B0501	665mm	665mm	430mm
B0601	615mm	615mm	380mm


IDENTIFY Foot Type

S Foot (01)	T Foot (04)	TC Foot (06)	A Foot (02)

A400 SERIES

CHECK TAG

Example: A400T-14 is T foot with 14" travel

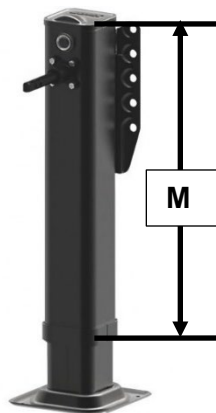

NO TAG – Measure the outer casing as below

M = length of outer housing (**under cap**)

Model	Geared Leg	Ungearred Leg	Travel
A400/S/T/G/A -19	800mm	730mm	19" (482.6mm)
A400/S/T/G/A -17	750mm	685mm	17" (431.8mm)
A400/S/T/G/A -14	675mm	600mm	14" (355.6mm)

IDENTIFY Foot Type

S Foot	T Foot	G Foot	A Foot